

## 4 Foot Central Park



Recycled Plastic Bases



Hardware



6 Slats



4 Ft Central Park

### PARTS LIST: (Quantity for one 4' bench)

QTY	ITEM
2	2" x 4" x 4 ft Bench Slats with 4 holes
4	2" x 4" x 4 ft Bench Slats with 2 holes
2	Pre drilled Bench Supports
16	1/4 x 3 1/2 Zinc Plated Screws
16	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket set with a 7/16" socket

### INSTALLATION INSTRUCTIONS:

1. Check parts list to verify all items.
2. Assemble Bench on a flat, level surface.
3. Place washers on the zinc plated lag screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the holes in the bench slats letting them extend approximately 1/4".
5. Place the bench slats on the supports and line up the pre drilled holes in the supports. Start with one slat on the front and then one slat on the top (this allows you to square the bench).
6. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
7. DO NOT OVERTIGHTEN THE LAG SCREWS!! THIS MAY CAUSE THE PLASTIC SUPPORTS TO STRIP OUT!!



## 6 Foot Central Park



Central Park Hardware



Central Park Bases



Central Park Slats



Central Park

### PARTS LIST: (Quantity for one 6' bench)

QTY	ITEM
2	2" x 4" x 6 ft Bench Slats with 6 holes
4	2" x 4" x 6 ft Bench Slats with 3 holes
3	Pre Drilled Bench Supports
24	1/4 x 3 1/2 Zinc Plated Lag Screws
24	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket set with 7/16" socket

### INSTALLATION INSTRUCTIONS:

1. Check parts list to verify all items.
2. Assemble Bench on a flat, level surface.
3. Place washers on the zinc plated lag screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the holes in the bench slats letting them extend approximately 1/4".
5. Place the bench slats on the supports and line up the pre drilled holes in the supports. Start with one slat on the front and then one slat on the top (this allows you to square the bench).
6. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
7. DO NOT OVERTIGHTEN THE LAG SCREWS!! THIS MAY CAUSE THE PLASTIC SUPPORTS TO STRIP OUT!!




## 8 Foot Central Park



Hardware



Recycled Plastic Bases

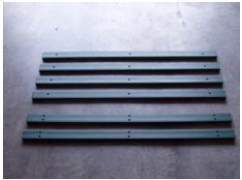

Slats



8 ft central park

### PARTS LIST: (Quantity for one 8' bench)

QTY	ITEM
2	2" x 4" x 8 ft. Bench Slats with 8 holes
4	2" x 4" x 8 ft. Bench Slats with 4 holes
4	Pre Drilled Bench Supports
32	1/4 x 3 1/2 Zinc Plated Lag Screws
32	Zinc Plated Washers

### TOOLS NEEDED FOR INSTALLATION:

Socket set with a 7/16" Socket.

### INSTALLATION INSTRUCTIONS:

1. Check parts list to verify all items.
2. Assemble bench on flat level surface.
3. Place washers on the zinc plated lag screws and start them in the pilot holes (on the bench slats).
4. Run the lag screws through the holes in the bench slats letting them extend approximately 1/4".
5. Place the bench slats on the supports and line up the pre drilled holes in the supports. Start with one slat on the front and then one slat on the top (this allows you to square the bench).
6. Using the 7/16" socket tighten the lag screws securing the slats and the supports.
7. **DO NOT OVERTIGHTEN THE LAG SCREWS!! THIS MAY CAUSE THE PLASTIC SUPPORTS TO STRIP OUT!!**



---

[www.jayhawkplastics.com](http://www.jayhawkplastics.com)